


MODULAR OUTDOOR KITCHEN

BBQ1000101S BASE MODULE INCL. SCREW SET

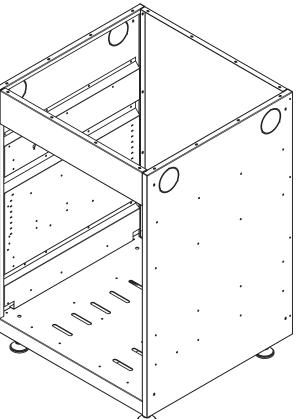





Video guide

REV 1.0 03/2023



TABLE OF CONTENTS

KEY POINTS FOR ASSEMBLY	3
FOR YOUR SAFETY	3
CARE AND MAINTENANCE	3
IMPORTANT FOR THE FOUNDATION	3
DESCRIPTION OF SYMBOLS	3
SCOPE OF DELIVERY	4
ASSEMBLY	5



KEY POINTS FOR ASSEMBLY

These assembly instructions show the assembly of the outdoor barbecue kitchen. Read these assembly instructions carefully before commissioning! Failure to observe the risks, warnings and safety precautions set out in these assembly instructions may result in injuries or property damage.

Observe a working temperature of +5 °C to +35 °C for assembly.

FOR YOUR SAFETY

$\mathbf{\Lambda}$	DANGER! Danger of death and physical injury owing to improper use.	
	Observe the Weber barbecue manual!	
$\mathbf{\Lambda}$	ATTENTION! Risk of cutting on sharp edges.	Do not ste de-icing s
	Install a keder strip on sharp edges	Remove soap.
	 ATTENTION! Damage to the base module with drawers owing to tipping. The base module with drawers may only be used in combination with a barbecue attachment or other base modules with doors or corner element. 	 Do not us The surfactorial scratched slip mats. IMPORTAL Prevent rising
	Anchoring to the wall using a wall mounting element is also permissible.	of a thick plas to rainwater i
$\mathbf{\Lambda}$	ATTENTION! Damage to the modules	Place the out
	First assemble all base modules and connect all base modules together be- fore installing drawers, insert compart- ments, doors, etc.	DESCRIPT
	 ATTENTION! Damage to the outdoor barbecue kitchen owing to high temperatures. The wall mounting element is a technical component which is not suitable for attachment to heat-sensitive materials. Do not place the wall mounting ele- 	
	ment on insulated or plastered walls. Have the façade or structure approved for attachment of the outdoor barbe- cue kitchen in advance by the manu- facturer.	
	 Appropriate thermal separation be- tween the outdoor barbecue kitchen and the façade or structure must be ensured on site (excluded from the 	
	 product liability!). A temperature of up to 180 °C should be anticipated for wall mounting ele- ments. Please note that the radiant heat from barbecues can still be up to 150 	í
	degrees 25 cm away.	
		1

CARE AND MAINTENANCE



ATTENTION! Damage to the outdoor barbecue kitchen owing to storm winds.

- Position the outdoor barbecue kitchen • in an area which is sheltered from the wind.
- tore aggressive chemicals such as chlorine or salt in the outdoor barbecue kitchen.
- sunscreen and other creams with water and
- se abrasive cleaning agents.
- aces of the outdoor kitchen may become d. Protect the surfaces with liner and/or non-

NT FOR THE FOUNDATION

g soil moisture and condensation by means stic sheet under the foundation. Pay attention in the foundation design.

door barbecue kitchen on a paved area.

TION OF SYMBOLS


	USE WORK GLOVES DURING ASSEMBLY!
\bigcirc	USE A SUITABLE UNDERLAY TO PREVENT SCRATCHES!
	YOU WILL NEED A HELPER FOR THIS ASSEMBLY STEP.
	TOOLS REQUIRED FOR THIS ASSEMBLY STEP.
í	NOTE/INFORMATION
	SPIRIT LEVEL SYMBOL Align the part in question using the spirit level.



SCOPE OF DELIVERY

EN

Ц Ц

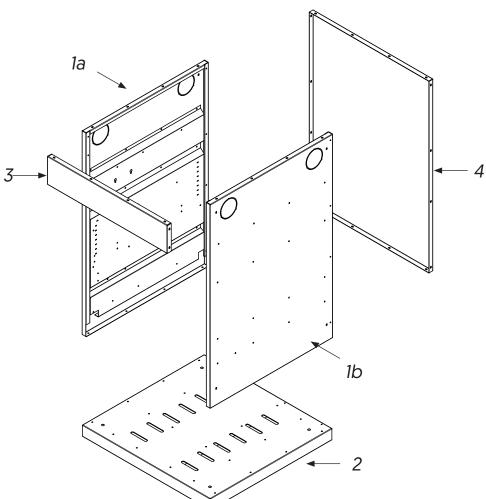

1a	BBQ2000102 base module – left side
1b	BBQ2000103 base module – right side
2	BBQ2000101 base module – optional bottom BBQ2000240 bottom with cut out (for base module)
3	BBQ1000700 panel, closed or other
4	BBQ2000104 base module – back panel *
	BBQ1100100A accessory set

 * optional BBQ1000600 ventilated back panel (with cable gland), BBQ1000610 ventilated back panel (WITHOUT cable gland) OR 2x BBQ1000700 closed back panel

heights

Adjustable feet available in various



 \frown

ASSEMBLY


ACCESSORIES – BBQ1100100A:

4 pcs. BBQ2000213 adjustable foot, 80 mm 1 pc. BBQ2000186 5 mm Allen key for adjustable feet 32 pcs. BBQ2000200 truss head screws M4x10 DIN 7380-1 A2 Tx 20 4 pcs. BBQ2002519 M4 stainless steel nuts




20 SW 5


Connect the left side element to the base bottom.

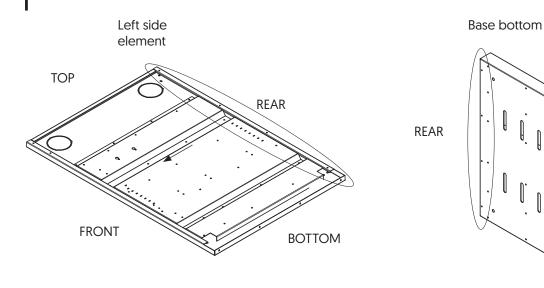



2 Attach the base bottom to the underside with 4 truss head screws M4x10.

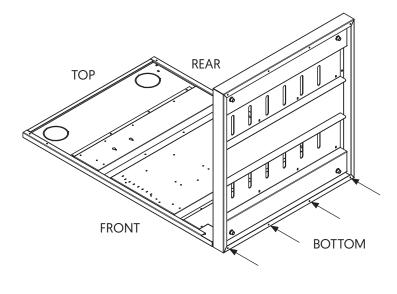

 3a Attach the back panel to the inside with 8 truss head screws M4x10.

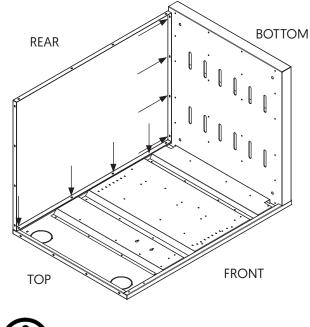




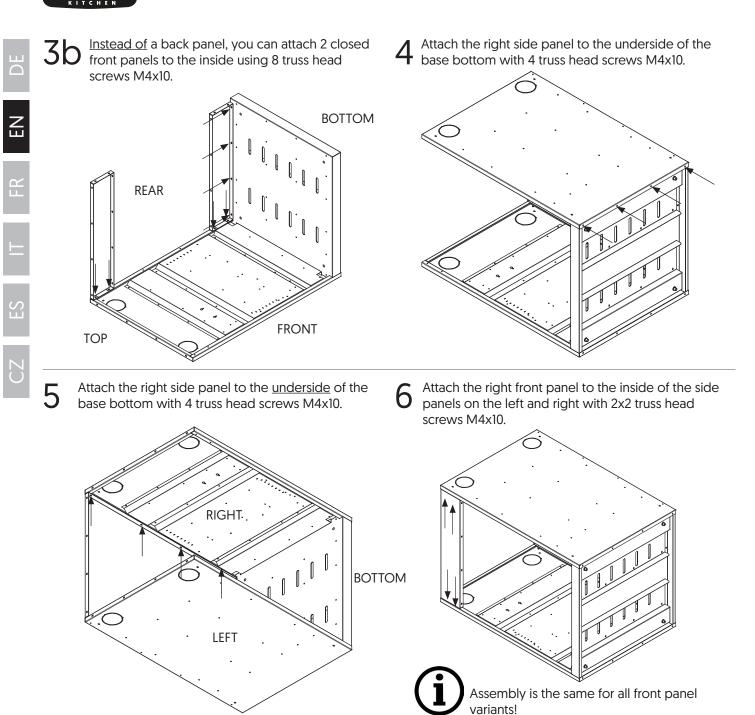

Screw the 4 adjustable feet into the base bottom.

Set the base module down on the adjustable feet.

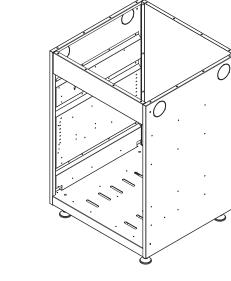

8





 \cap

EZ


9

Align the base module using the spirit level. To do this, turn the adjustable feet until the base module is level.

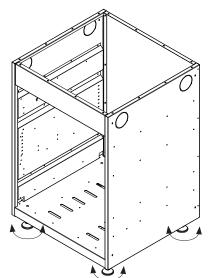

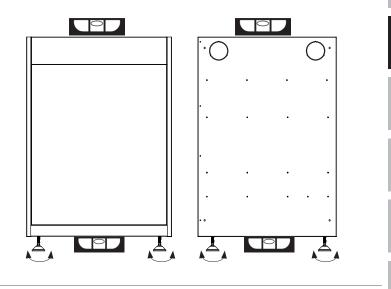


10

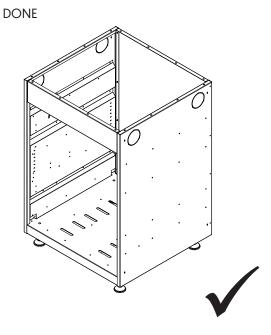



Connection of a base module to an attachment kit

You can connect a base module to the barbecue attachment kit with 4 truss head screws.

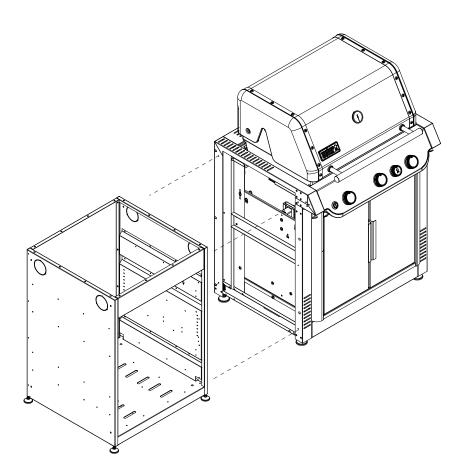


 \bigcirc



Connection of multiple base modules

You can connect multiple base modules with 4 truss head screws and 4 M4 stainless steel nuts.

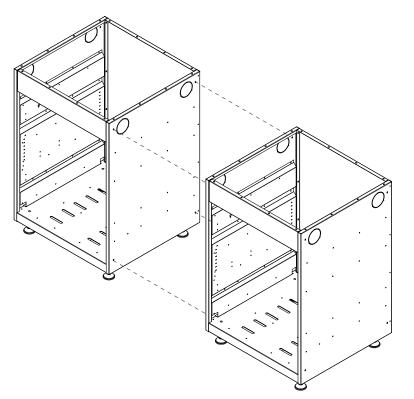



ЦЧ

ш

WWW.BBQ-KITCHEN.COM



BBQ KITCHEN GMBH MERKURSTRASSE 11 4614 MARCHTRENK | AUSTRIA

OFFICE@BBQ-KITCHEN.COM (+43) 7243 23 596

THE MODULAR OUTDOOR KITCHEN PERFECT FOR EVERY TERRACE. CREATED IN AUSTRIA - MADE IN GERMANY

