



 
 
MODULAR OUTDOOR KITCHEN

BBQ1000400S door with handle incl. screw set

BBQ2000253S high door with stop incl. screw set

DOORS

ASSEMBLY INSTRUCTIONS

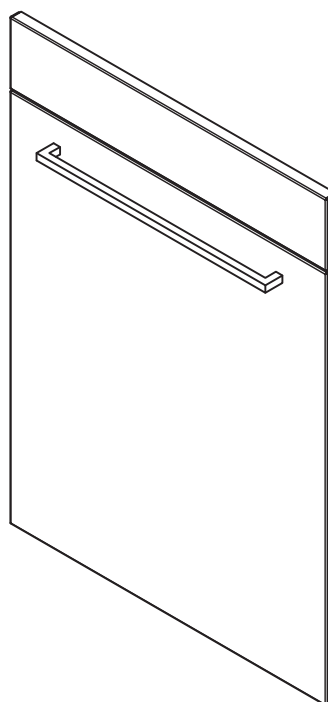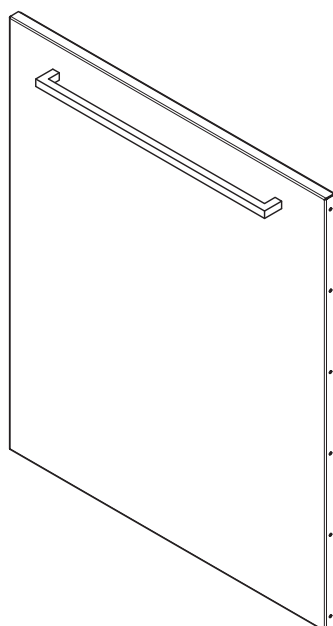

→ Video guide

REV 1.0
03/2023



DE
EN
FR
IT
ES
CZ

TABLE OF CONTENTS


<i>KEY POINTS FOR ASSEMBLY</i>	3
<i>FOR YOUR SAFETY</i>	3
<i>CARE AND MAINTENANCE</i>	3
<i>IMPORTANT FOR THE FOUNDATION</i>	3
<i>DESCRIPTION OF SYMBOLS</i>	3
<i>SCOPE OF DELIVERY</i>	4
<i>ACCESSORIES (OPTIONAL)</i>	4
<i>ASSEMBLY</i>	5


KEY POINTS FOR ASSEMBLY


These assembly instructions show the assembly of the outdoor barbecue kitchen. Read these assembly instructions carefully before commissioning! Failure to observe the risks, warnings and safety precautions set out in these assembly instructions may result in injuries or property damage.


Observe a working temperature of +5 °C to +35 °C for assembly.


FOR YOUR SAFETY

	DANGER! Danger of death and physical injury owing to improper use. <ul style="list-style-type: none"> Observe the Weber barbecue manual!
---	--


	ATTENTION! Risk of cutting on sharp edges. <ul style="list-style-type: none"> Install a keder strip on sharp edges
---	--

	ATTENTION! Damage to the base module with drawers owing to tipping. <ul style="list-style-type: none"> The base module with drawers may only be used in combination with a barbecue attachment or other base modules with doors or corner element. Anchoring to the wall using a wall mounting element is also permissible.
---	---

	ATTENTION! Damage to the modules <ul style="list-style-type: none"> First assemble all base modules and connect all base modules together before installing drawers, insert compartments, doors, etc.
---	---

	ATTENTION! Damage to the outdoor barbecue kitchen owing to high temperatures. <ul style="list-style-type: none"> The wall mounting element is a technical component which is not suitable for attachment to heat-sensitive materials. Do not place the wall mounting element on insulated or plastered walls. Have the façade or structure approved for attachment of the outdoor barbecue kitchen in advance by the manufacturer. Appropriate thermal separation between the outdoor barbecue kitchen and the façade or structure must be ensured on site (excluded from the product liability!). A temperature of up to 180 °C should be anticipated for wall mounting elements. Please note that the radiant heat from barbecues can still be up to 150 degrees 25 cm away.
---	---

CARE AND MAINTENANCE

	ATTENTION! Damage to the outdoor barbecue kitchen owing to storm winds. <ul style="list-style-type: none"> Position the outdoor barbecue kitchen in an area which is sheltered from the wind.
---	---


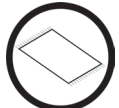



- Do not store aggressive chemicals such as chlorine or de-icing salt in the outdoor barbecue kitchen.
- Remove sunscreen and other creams with water and soap.
- Do not use abrasive cleaning agents.
- The surfaces of the outdoor kitchen may become scratched. Protect the surfaces with liner and/or non-slip mats.

IMPORTANT FOR THE FOUNDATION


Prevent rising soil moisture and condensation by means of a thick plastic sheet under the foundation. Pay attention to rainwater in the foundation design.

Place the outdoor barbecue kitchen on a paved area.

DESCRIPTION OF SYMBOLS

	USE WORK GLOVES DURING ASSEMBLY!
	USE A SUITABLE UNDERLAY TO PREVENT SCRATCHES!
	YOU WILL NEED A HELPER FOR THIS ASSEMBLY STEP.
	TOOLS REQUIRED FOR THIS ASSEMBLY STEP.
	NOTE/INFORMATION
	SPIRIT LEVEL SYMBOL Align the part in question using the spirit level.


SCOPE OF DELIVERY

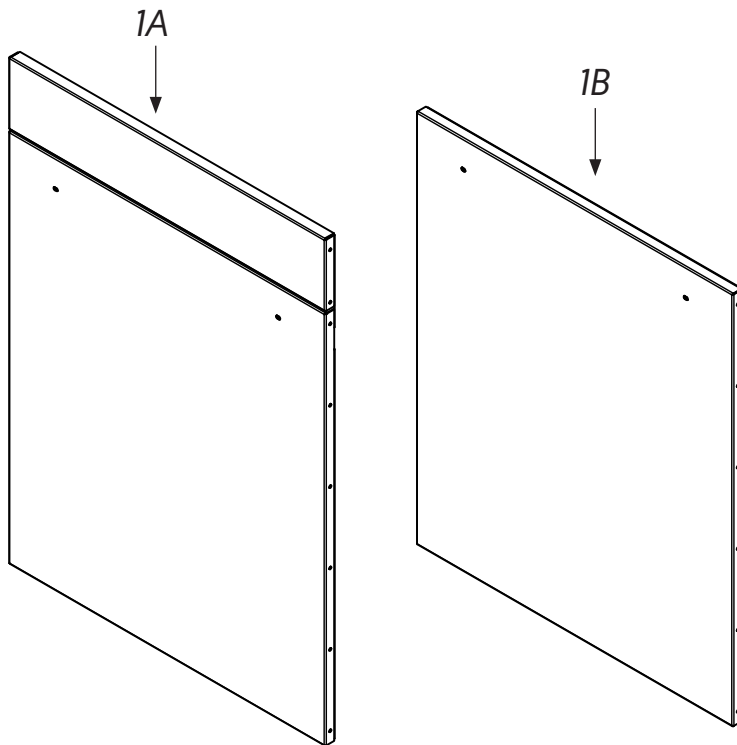

1A	BBQ2000253 high door with stop
1B	BBQ2000112 door with handle
	BBQ1100400A accessory set

ACCESSORIES [OPTIONAL]

1	BBQ2000249 door stop with magnet
---	----------------------------------

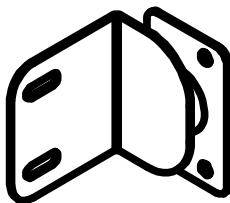 

ASSEMBLY


ACCESSORIES – BBQ1100400A:

1 pc. stainless steel handle – length 420 mm	12 pcs. Truss head screws M4x10 DIN 7380-1 A2 Torx20
2 pcs. CLIP standard hinge	4 pcs. door stop damper, black, 4.4 mm
2 pcs. CLIP mounting plate, cross	2 pcs. plugs, black, door 34, 9 x 38.1 x 11.5 mm





Tx20

 1 Assembly is the same for all door variants!


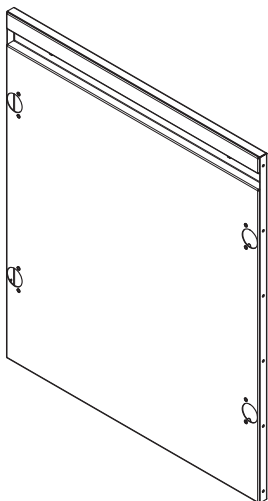


2 Attach the 2 CLIP standard hinges using 2 x 2 truss head screws.

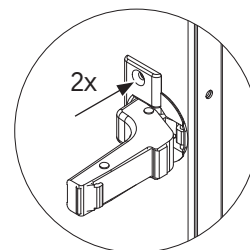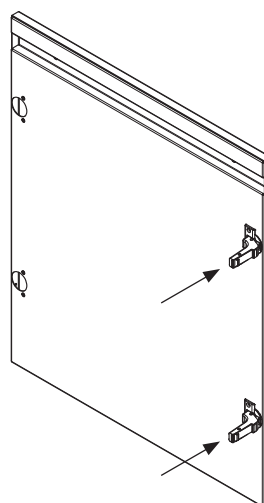  

The CLIP standard hinges can be installed on the left or right, depending on which side you want the doors to open.

  3 Install the 2 mounting plates, cross using 2 x 2 truss head screws.

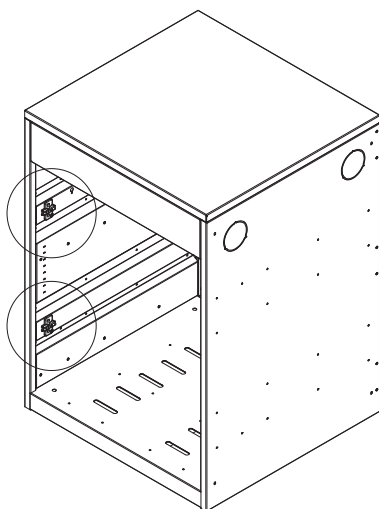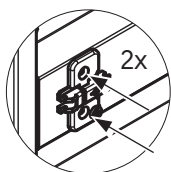

The CLIP mounting plates, cross can be installed on the left or right, depending on which side you want the doors to open. Please keep in mind on which side you installed the 2 CLIP standard hinge.



During installation, pay attention to the arrow marking on the mounting plate [arrow towards hinge].

DE

EN

FR

 
 
IT

ES

CZ


4a

Install the 2 door stopper plates using 2 x 2 truss head screws.

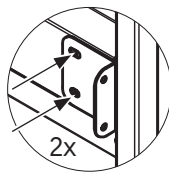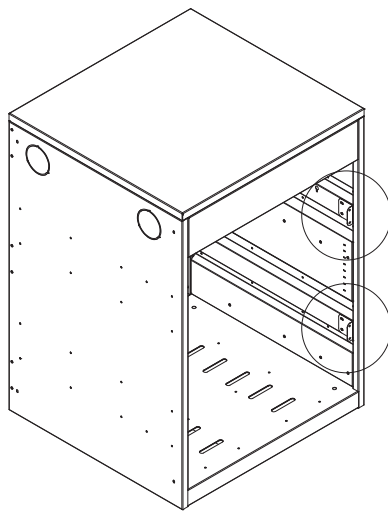


4b

 Attach the 2 x 2 door stopper plates to the door stop.

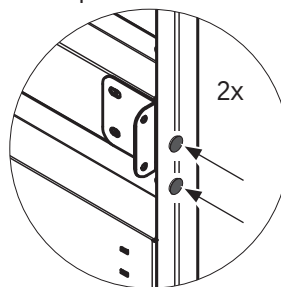



4c

 Attach 2 plugs, black to the door.

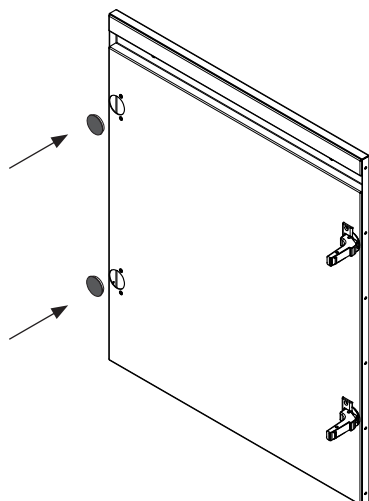



5a

  Install the 2 door stopper plates using 2 x 2 truss head screws.

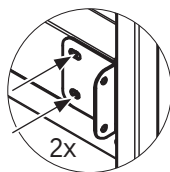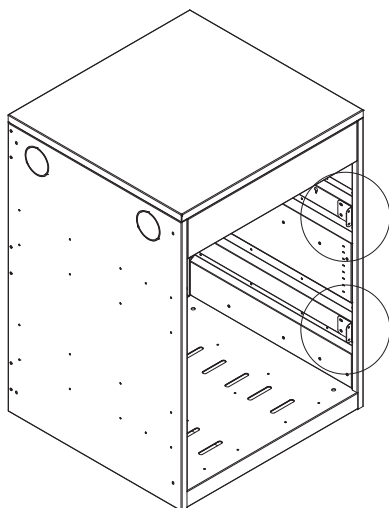


5b

  
Attach the magnet to the door with 2 truss head screws.

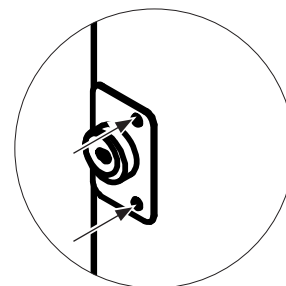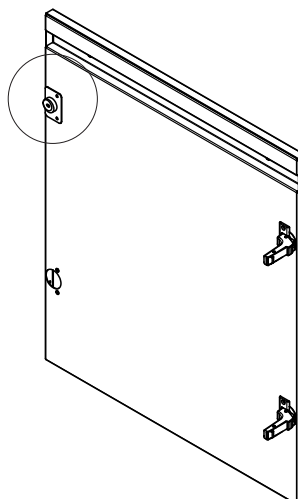





5c Attach 1 plug, black to the door.

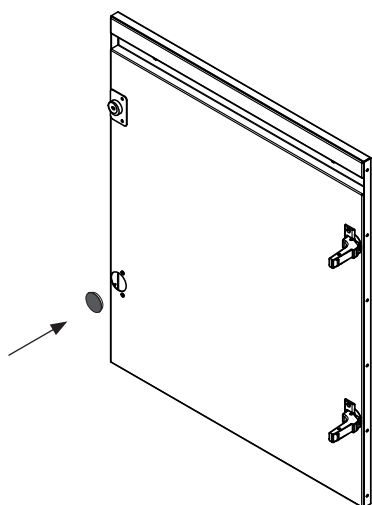 


6 Attach the stainless steel handle with the enclosed screws.

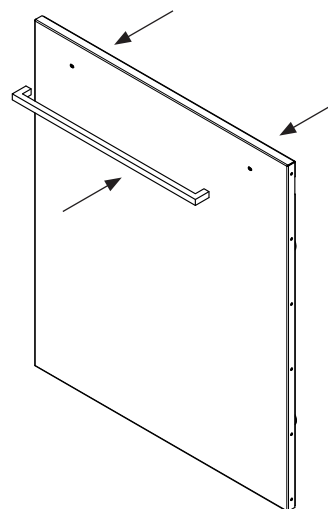 

    7 Align the door using the adjusting screws and align the stop with the stopper plates.

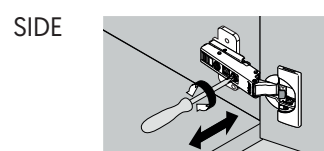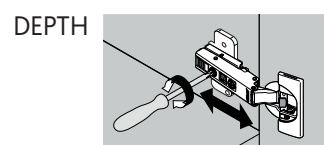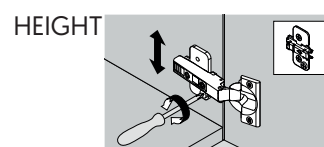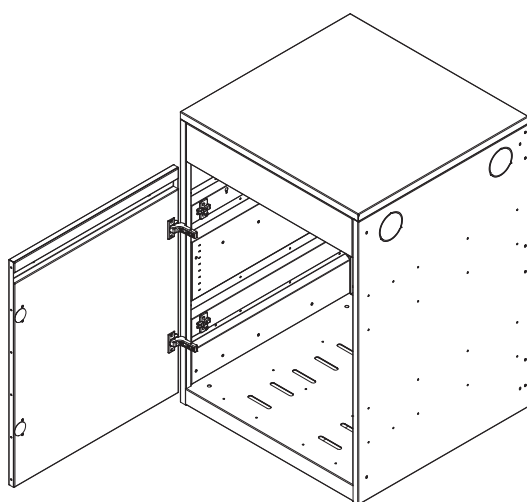

8 DONE

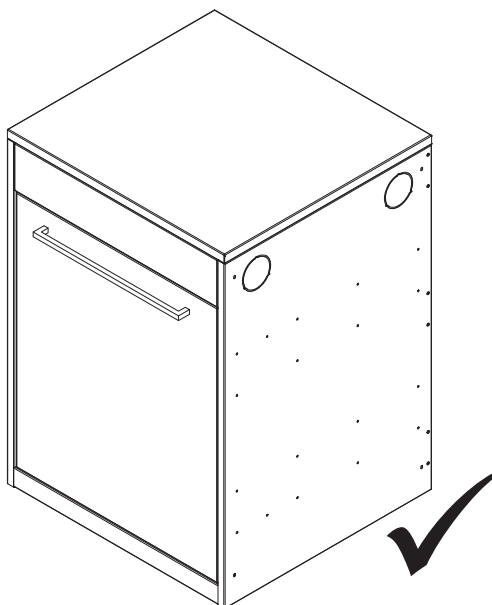 

DE

EN

FR

IT

ES

CZ



THE MODULAR OUTDOOR KITCHEN
PERFECT FOR EVERY TERRACE.
CREATED IN AUSTRIA - MADE IN GERMANY

OFFICE@BBQ-KITCHEN.COM
[+43] 7243 23 596



BBQ KITCHEN GMBH
MERKURSTRASSE 11
4614 MARCHTRENK | AUSTRIA

WWW.BBQ-KITCHEN.COM