




MODULAR OUTDOOR KITCHEN

BBQ1100050

CORNER ELEMENT

 ASSEMBLY INSTRUCTIONS

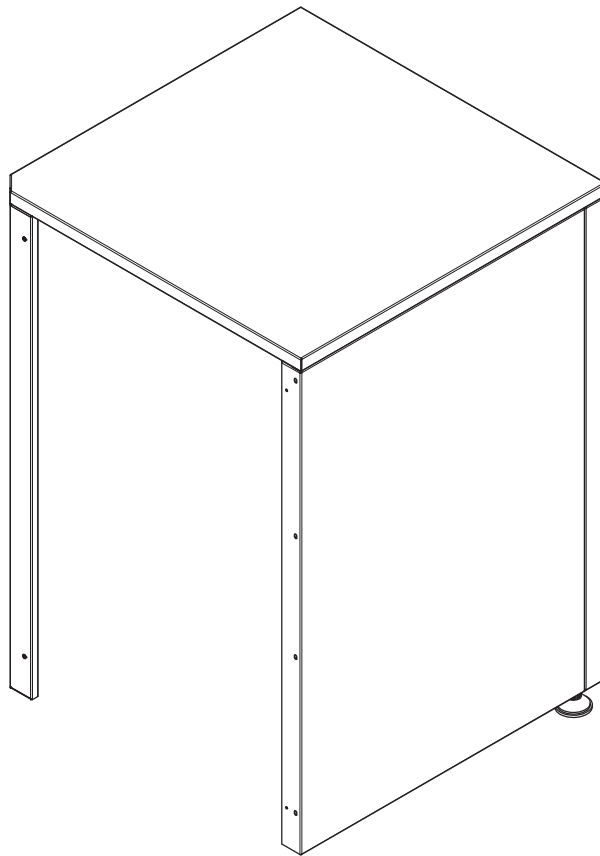

→ Video guide

REV 1.0
03/2023



DE

TABLE OF CONTENTS

EN

KEY POINTS FOR ASSEMBLY 3

FOR YOUR SAFETY 3

CARE AND MAINTENANCE 3

FR

IMPORTANT FOR THE FOUNDATION 3

DESCRIPTION OF SYMBOLS 3

IT

SCOPE OF DELIVERY 4

ASSEMBLY 5

ES


CZ


KEY POINTS FOR ASSEMBLY


These assembly instructions show the assembly of the outdoor barbecue kitchen. Read these assembly instructions carefully before commissioning! Failure to observe the risks, warnings and safety precautions set out in these assembly instructions may result in injuries or property damage.


Observe a working temperature of +5 °C to +35 °C for assembly.


FOR YOUR SAFETY

	<p>DANGER! Danger of death and physical injury owing to improper use.</p> <ul style="list-style-type: none"> Observe the Weber barbecue manual!
---	---


	<p>ATTENTION! Risk of cutting on sharp edges.</p> <ul style="list-style-type: none"> Install a keder strip on sharp edges
---	---

	<p>ATTENTION! Damage to the base module with drawers owing to tipping.</p> <ul style="list-style-type: none"> The base module with drawers may only be used in combination with a barbecue attachment or other base modules with doors or corner element. Anchoring to the wall using a wall mounting element is also permissible.
---	--

	<p>ATTENTION! Damage to the modules</p> <ul style="list-style-type: none"> First assemble all base modules and connect all base modules together before installing drawers, insert compartments, doors, etc.
---	--

	<p>ATTENTION! Damage to the outdoor barbecue kitchen owing to high temperatures.</p> <ul style="list-style-type: none"> The wall mounting element is a technical component which is not suitable for attachment to heat-sensitive materials. Do not place the wall mounting element on insulated or plastered walls. Have the façade or structure approved for attachment of the outdoor barbecue kitchen in advance by the manufacturer. Appropriate thermal separation between the outdoor barbecue kitchen and the façade or structure must be ensured on site (excluded from the product liability!). A temperature of up to 180 °C should be anticipated for wall mounting elements. Please note that the radiant heat from barbecues can still be up to 150 degrees 25 cm away.
---	--

CARE AND MAINTENANCE

	<p>ATTENTION! Damage to the outdoor barbecue kitchen owing to storm winds.</p> <ul style="list-style-type: none"> Position the outdoor barbecue kitchen in an area which is sheltered from the wind.
---	--


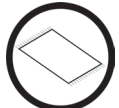



- Do not store aggressive chemicals such as chlorine or de-icing salt in the outdoor barbecue kitchen.
- Remove sunscreen and other creams with water and soap.
- Do not use abrasive cleaning agents.
- The surfaces of the outdoor kitchen may become scratched. Protect the surfaces with liner and/or non-slip mats.

IMPORTANT FOR THE FOUNDATION


Prevent rising soil moisture and condensation by means of a thick plastic sheet under the foundation. Pay attention to rainwater in the foundation design.

Place the outdoor barbecue kitchen on a paved area.

DESCRIPTION OF SYMBOLS

	USE WORK GLOVES DURING ASSEMBLY!
	USE A SUITABLE UNDERLAY TO PREVENT SCRATCHES!
	YOU WILL NEED A HELPER FOR THIS ASSEMBLY STEP.
	TOOLS REQUIRED FOR THIS ASSEMBLY STEP.
	NOTE/INFORMATION
	SPIRIT LEVEL SYMBOL Align the part in question using the spirit level.

 SCOPE OF DELIVERY

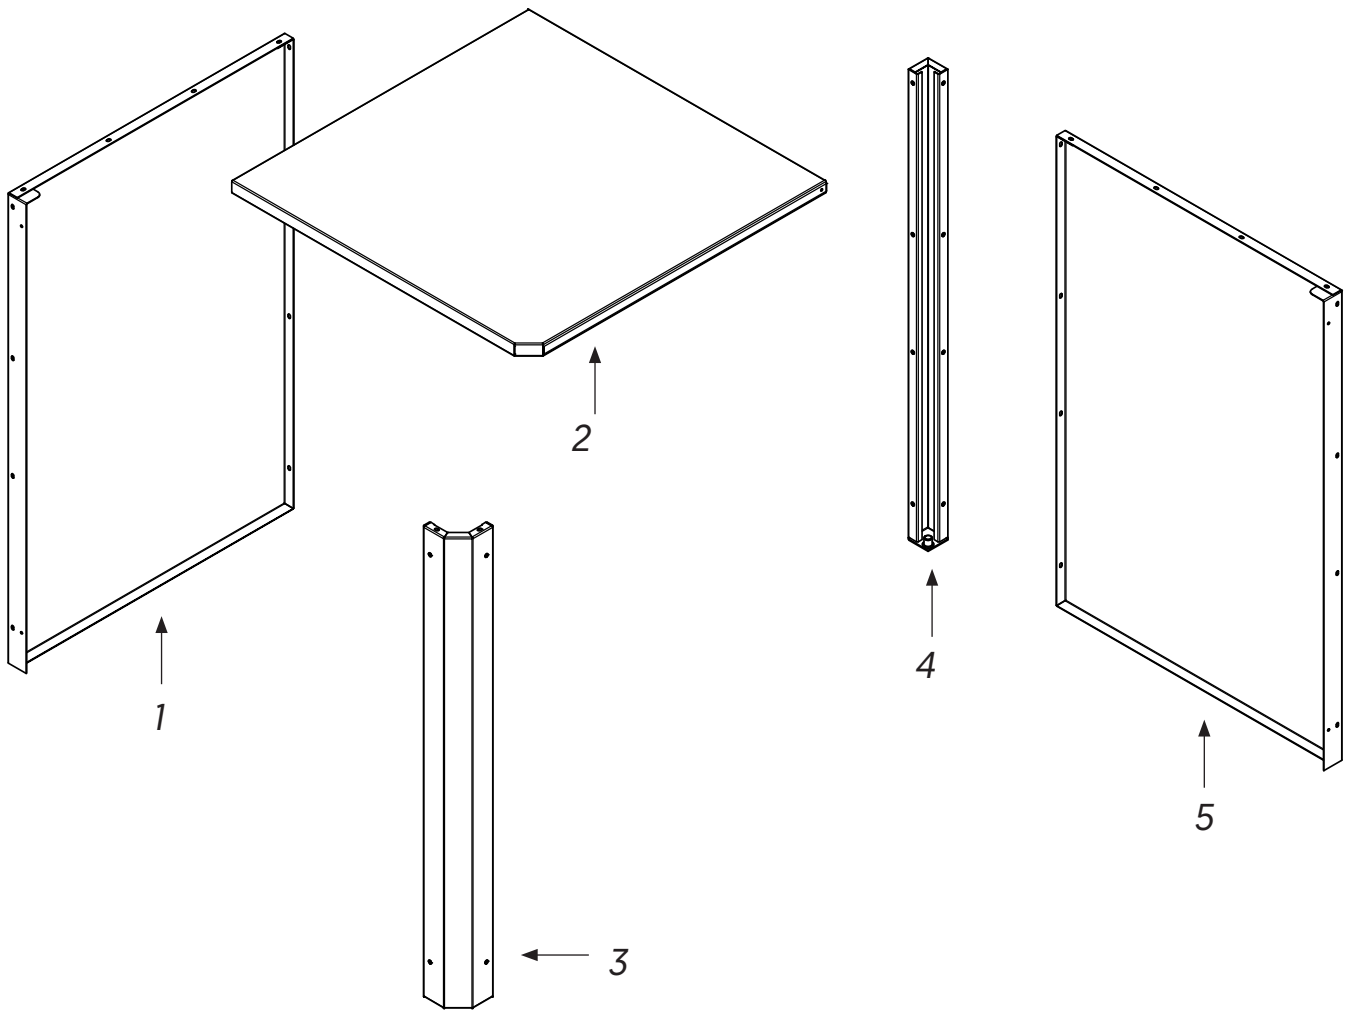

1	BBQ2000199 corner element – left back panel
2	BBQ1102700S stainless steel closed corner element cover incl. screw set (optional)
3	BBQ2000118 corner element – front element
4	BBQ2000119 corner element – back element
5	BBQ2000299 corner element – right back panel
	BBQ1100500A accessory set

ASSEMBLY

ACCESSORIES – BBQ1100500A:

1 pc. BBQ2000213 adjustable foot, 80 mm
 18 pcs. BBQ2000200 truss head screws
 M4x10 DIN 7380-1 A2 Tx 20



Adjustable feet available in various heights





Tx20



SW 5



1

  Attach the two back panels to the corner element – back element with 8 truss head screws

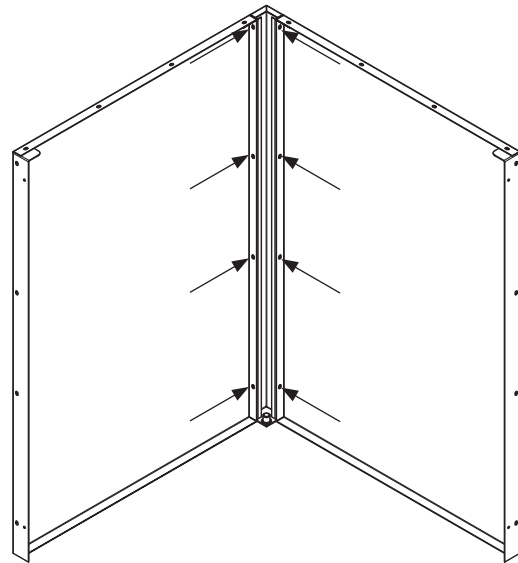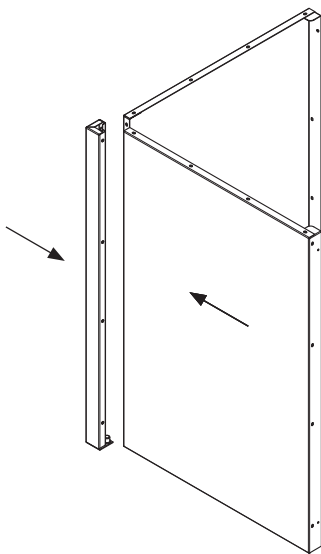

2 OPTIONAL

  Attach the cover to the back panel structure with 8 truss head screws

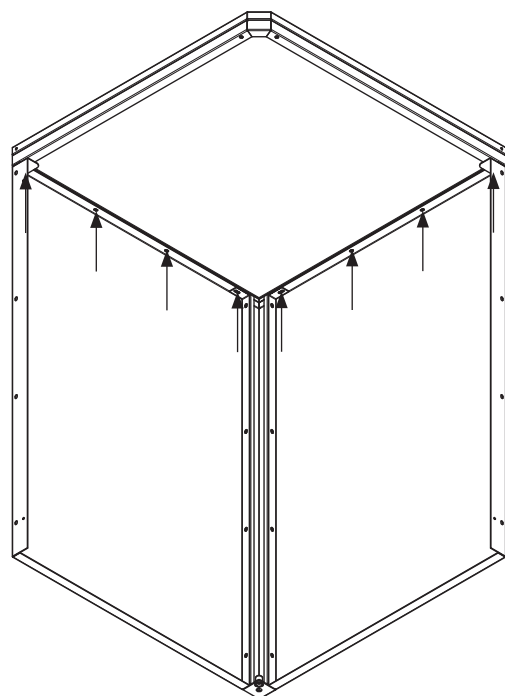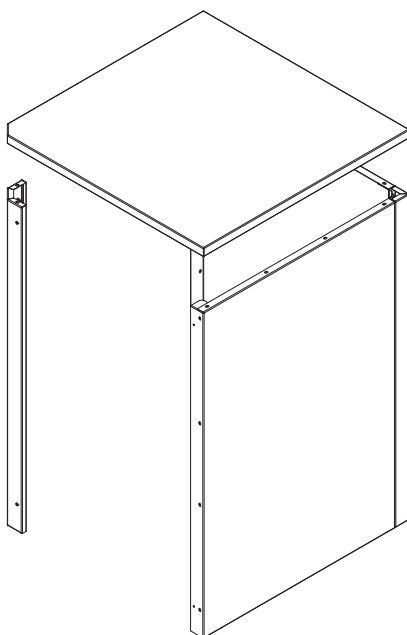

DE

EN

FR

IT

ES

CZ

DE

EN

 
 
FR

IT


ES

CZ

- 3** Attach the corner element – front element with the cover with 2 truss head screws
- 4** Screw the adjustable foot into the corner element – back element

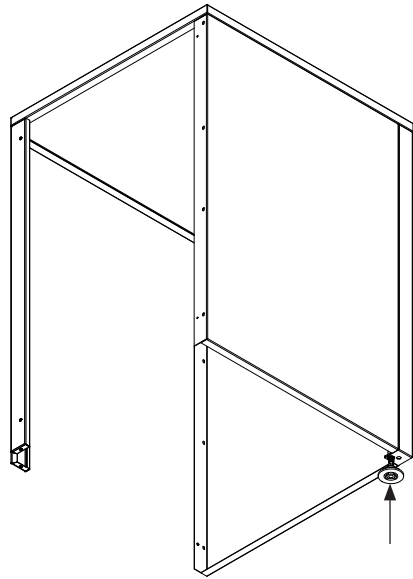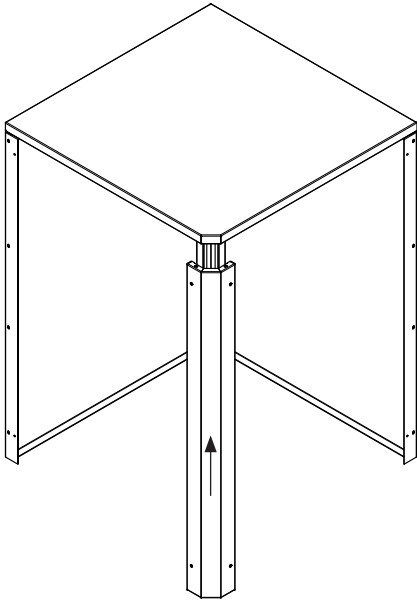


- 5** DONE

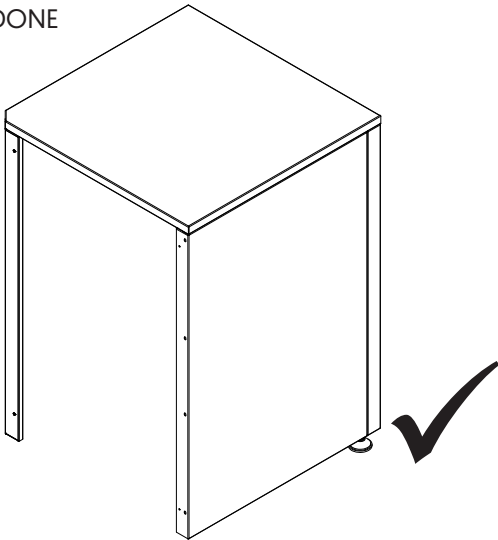 


6a

 Attach the corner module to the first base module with 4 truss head screws on the inside

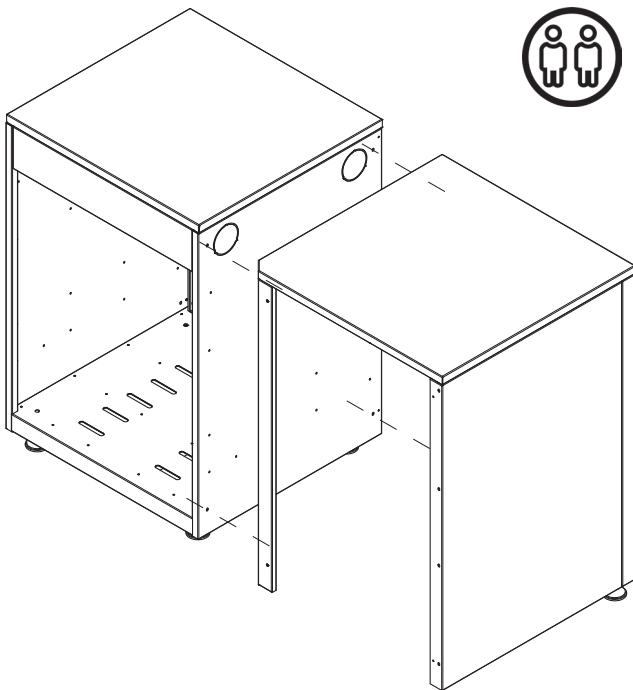

6b

 
Screw 4 truss head screws into the corner element through the threads into the attachment kit threads.

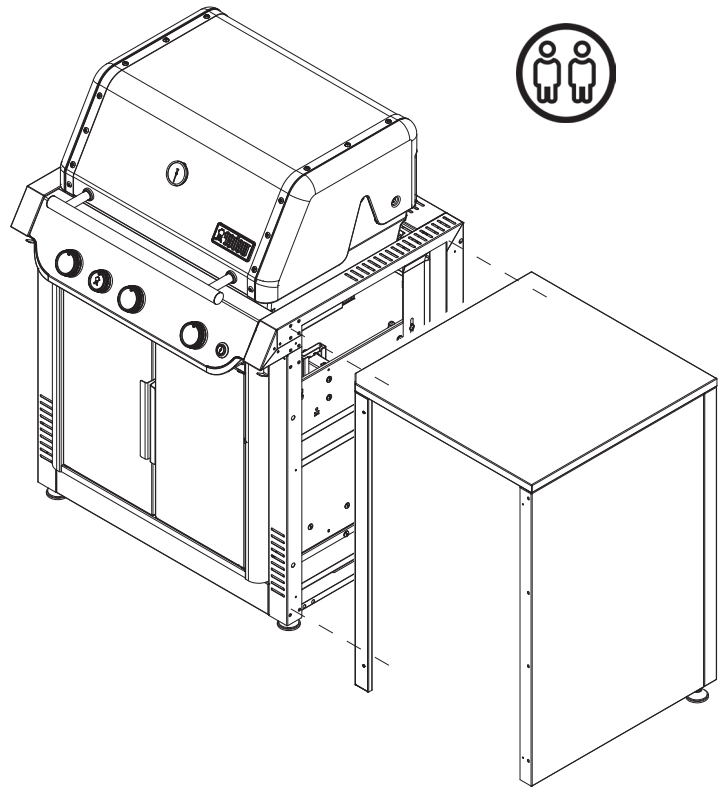

Install only one door module or case base on the corner module for this assembly variant!

7

 Attach the corner module to a second base module with 4 truss head screws on the inside. Align the corner module horizontally with the base modules.

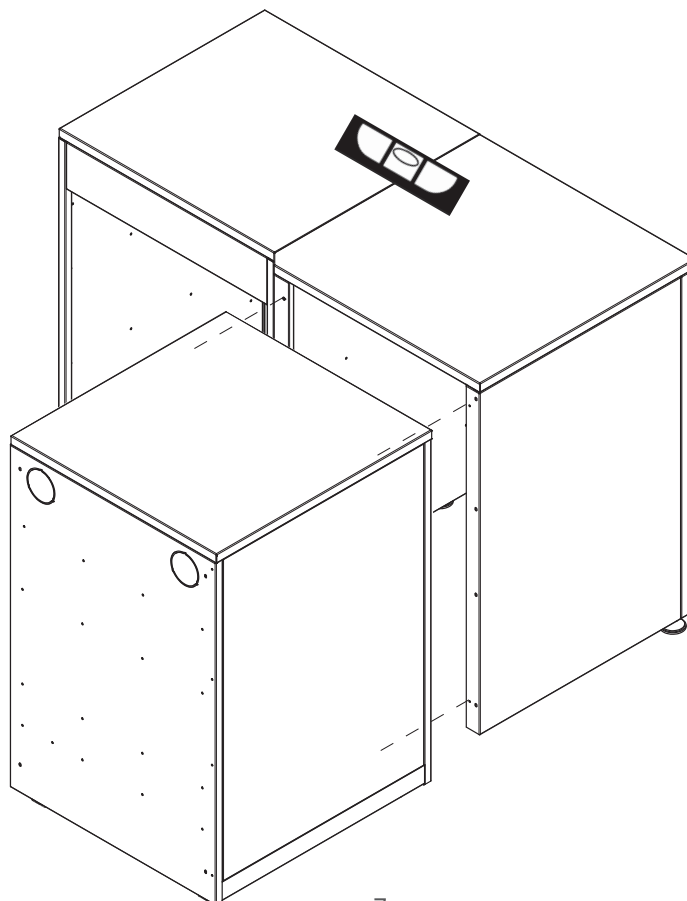



THE MODULAR OUTDOOR KITCHEN
PERFECT FOR EVERY TERRACE.
CREATED IN AUSTRIA - MADE IN GERMANY

OFFICE@BBQ-KITCHEN.COM
[+43] 7243 23 596



BBQ KITCHEN GMBH
MERKURSTRASSE 11
4614 MARCHTRENK | AUSTRIA

WWW.BBQ-KITCHEN.COM