


MODULAR OUTDOOR KITCHEN


BBQ2000247S, BBQ2000248S

# 403 MM CASE BASE INCL. SCREW SET & 225 MM CASE BASE INCL. SCREW SET

### ASSEMBLY INSTRUCTIONS



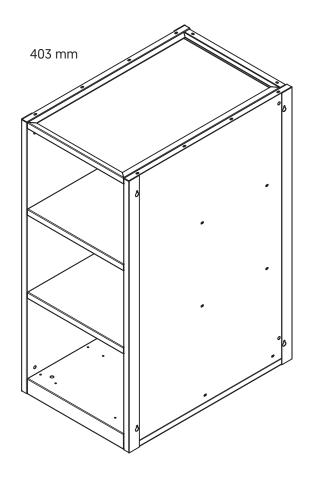

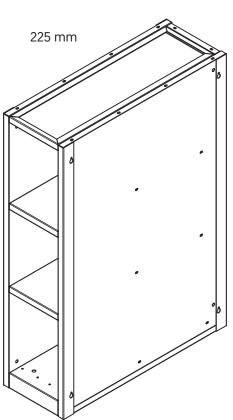



TARIF	OF	CONTENTS
IADLL	OF	CONTENTS

-	KEY POINTS FOR ASSEMBLY	3
Z	FOR YOUR SAFETY	3
	CARE AND MAINTENANCE	3
FR	IMPORTANT FOR THE FOUNDATION	3
	DESCRIPTION OF SYMBOLS	3
	SCOPE OF DELIVERY	4
Н	ASSEMBLY	5

### **N**

#### KEY POINTS FOR ASSEMBLY

These assembly instructions show the assembly of the outdoor barbecue kitchen. Read these assembly instructions carefully before commissioning! Failure to observe the risks, warnings and safety precautions set out in these assembly instructions may result in injuries or property damage.

Observe a working temperature of +5 °C to +35 °C for assembly.

#### FOR YOUR SAFETY



DANGER! Danger of death and physical injury owing to improper use.

• Observe the Weber barbecue manual!



ATTENTION! Risk of cutting on sharp edges.

Install a keder strip on sharp edges



ATTENTION! Damage to the base module with drawers owing to tipping.

The base module with drawers may only be used in combination with a barbecue attachment or other base modules with doors or corner element. Anchoring to the wall using a wall mounting element is also permissible.



ATTENTION! Damage to the modules

 First assemble all base modules and connect all base modules together before installing drawers, insert compartments, doors, etc.



ATTENTION! Damage to the outdoor barbecue kitchen owing to high temperatures.

- The wall mounting element is a technical component which is not suitable for attachment to heat-sensitive materials.
- Do not place the wall mounting element on insulated or plastered walls.
   Have the façade or structure approved for attachment of the outdoor barbecue kitchen in advance by the manufacturer.
- Appropriate thermal separation between the outdoor barbecue kitchen and the façade or structure must be ensured on site (excluded from the product liability!).
- A temperature of up to 180 °C should be anticipated for wall mounting elements. Please note that the radiant heat from barbecues can still be up to 150 degrees 25 cm away.

#### CARE AND MAINTENANCE



ATTENTION! Damage to the outdoor barbecue kitchen owing to storm winds.

- Position the outdoor barbecue kitchen in an area which is sheltered from the wind.
- Do not store aggressive chemicals such as chlorine or de-icing salt in the outdoor barbecue kitchen.
- Remove sunscreen and other creams with water and soap.
- Do not use abrasive cleaning agents.
- The surfaces of the outdoor kitchen may become scratched. Protect the surfaces with liner and/or nonslip mats.

#### IMPORTANT FOR THE FOUNDATION

Prevent rising soil moisture and condensation by means of a thick plastic sheet under the foundation. Pay attention to rainwater in the foundation design.

Place the outdoor barbecue kitchen on a paved area.


#### **DESCRIPTION OF SYMBOLS**





SPIRIT LEVEL SYMBOL Align the part in question using the spirit level.

#### SCOPE OF DELIVERY

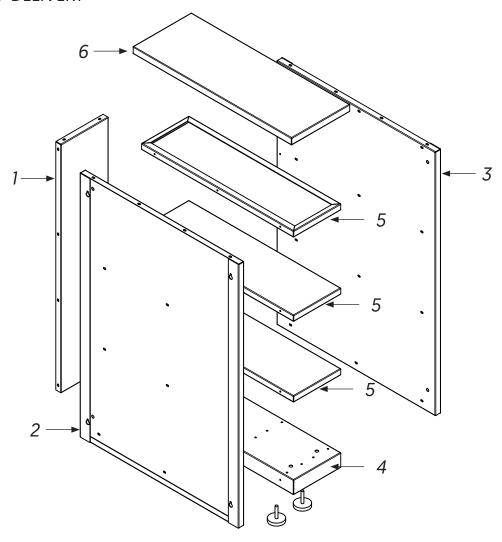

1	BBQ2000300 case base back panel, 225 mm	
2	BBQ2000301 case base left side element, 225 mm	
3	BBQ2000302 case base right side element, 225 mm	
4	BBQ2000303 case base bottom, 225 mm	
5	BBQ2000304 case base insert compartment, 225 mm (optional)	
6	BBQ2000252S countertop for 403 mm case base incl. screw set	
	BBQ2000257A accessory set island module	

1	BBQ2000305 case base back panel, 403 mm		
2	BBQ2000306 case base left side element, 403 mm		
3	BBQ2000307 case base right side element, 403 mm		
4	BBQ2000308 case base bottom, 403 mm		
5	BBQ2000309 case base insert compartment, 403 mm		
6	BBQ2000251S countertop for 403 mm case base incl. screw set		
	BBQ2000257A accessory set island module		

#### **ASSEMBLY**

#### ACCESSORIES - BBQ2000257A:

32 pcs. BBQ2000200 truss head screws M4x10 DIN 7380-1 A2 Torx20

1 pc. BBQ2000227 pressure lock bag, 100 x 150 mm 4 pcs. BBQ2000213 BBQ kitchen adjustable foot, 80 mm

 


 















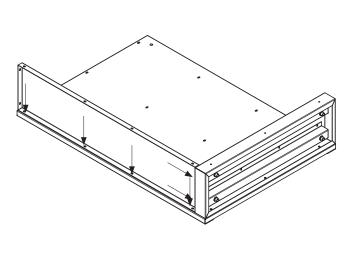


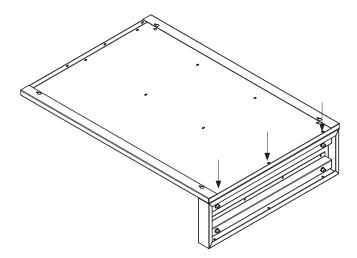

Attach the 2 insert compartments with 2 x 3 truss head screws.

Attach the 3rd insert compartment with the smooth side facing the inside with 3 truss head screws.

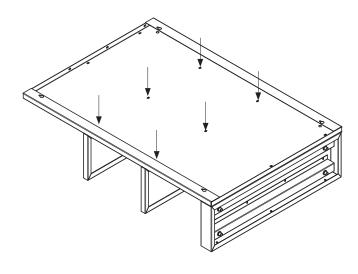


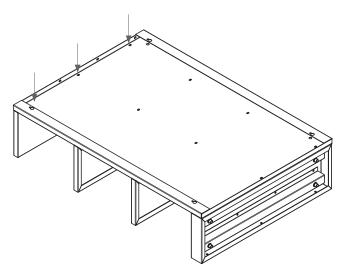



DE

 Attach the side element with 12 truss head screws.



H N

H H


S.




CZ

7 Attach the 4 adjustable feet.


Align the case base using the spirit level. To do this, turn the adjustable feet until the case base is aligned.

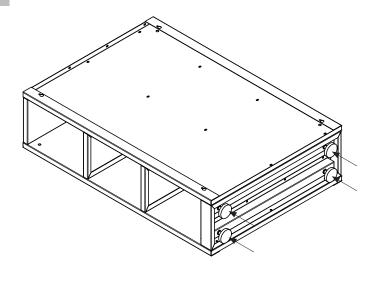

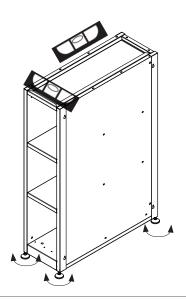


9

**DONE** 

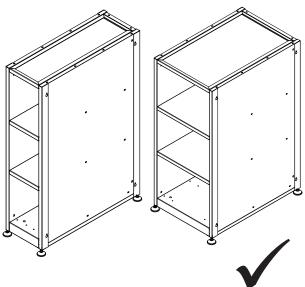


#### Connection to base module

You can connect the case base to a base module with 4 truss head screws and 4 M4 stainless steel nuts.

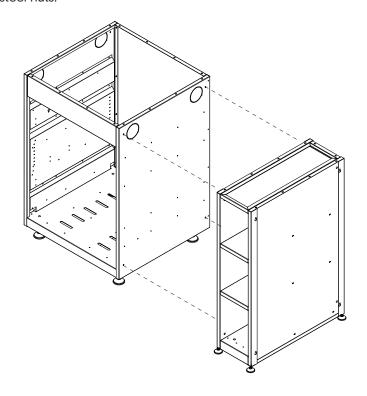

#### Connection to attachment kit, corner element

You can connect the case base to an attachment kit or corner element by mounting it on the M4x12 stainless steel screws using the keyhole.

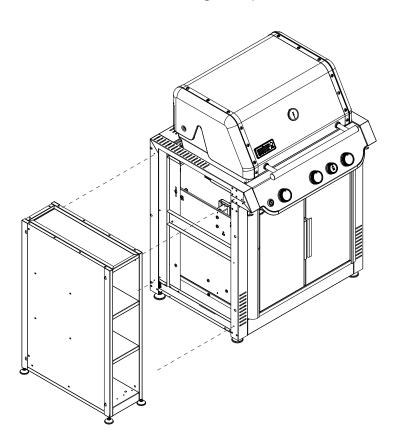



## THE MODULAR OUTDOOR KITCHEN PERFECT FOR EVERY TERRACE. CREATED IN AUSTRIA - MADE IN GERMANY

OFFICE@BBQ-KITCHEN.COM (+43) 7243 23 596



BBQ KITCHEN GMBH MERKURSTRASSE 11 4614 MARCHTRENK | AUSTRIA

WWW.BBQ-KITCHEN.COM