


## MODULAR OUTDOOR KITCHEN

# BBQ1102600S, BBQ2002555S, BBQ2002601S

# BBQ1001800S, BBQ2002558S

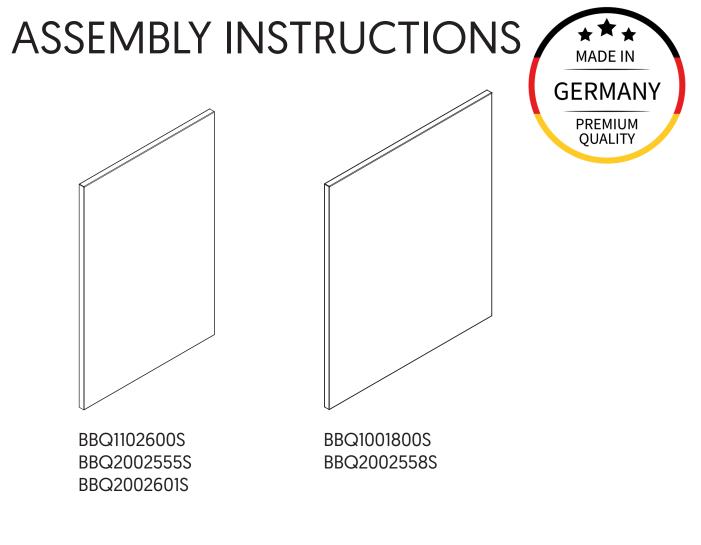



# $\frown$

 $\mathbf{Z}$ 

KEY POINTS FOR ASSEMBLY

These assembly instructions show the assembly of the outdoor barbecue kitchen. Read these assembly instructions carefully before commissioning! Failure to observe the risks, warnings and safety precautions set out in these assembly instructions may result in injuries or property damage.

Observe a working temperature of +5 °C to +35 °C for assembly.

FOR YOUR SAFETY		
$\mathbf{\Lambda}$	DANGER! Danger of death and physical injury owing to improper use.	
	• Observe the Weber barbecue manual!	
	ATTENTION! Risk of cutting on sharp edges.	
	Install a keder strip on sharp edges	
	ATTENTION! Damage to the base module with drawers owing to tipping.	
	• The base module with drawers may only be used in combination with a barbecue attachment or other base modules with doors or corner element. Anchoring to the wall using a wall mounting element is also permissible.	
	ATTENTION! Damage to the modules	
	• First assemble all base modules and connect all base modules together before installing drawers, insert compartments, doors, etc.	
$\mathbf{\Lambda}$	ATTENTION! Damage to the outdoor barbecue kitchen owing to high temperatures.	
	<ul> <li>The wall mounting element is a technical component which is not suitable for attachment to heat-sensitive materials.</li> <li>Do not place the wall mounting element on insulated or plastered walls. Have the façade or structure approved for attachment of the outdoor barbecue kitchen in advance by the manufacturer.</li> <li>Appropriate thermal separation between the outdoor barbecue kitchen and the façade or structure must be</li> </ul>	

- en and the façade or structure must be ensured on site (excluded from the product liability!). A temperature of up to 180 °C should be anticipated for wall mounting ele-
- ments. Please note that the radiant heat from barbecues can still be up to 150 degrees 25 cm away.

### CARE AND MAINTENANCE



ATTENTION! Damage to the outdoor barbecue kitchen owing to storm winds.

- Position the outdoor barbecue kitchen in an area which is sheltered from the wind.
- Do not store aggressive chemicals such as chlorine or • de-icing salt in the outdoor barbecue kitchen.
- Remove sunscreen and other creams with water and soap.
- Do not use abrasive cleaning agents. •
- The surfaces of the outdoor kitchen may become scratched. Protect the surfaces with liner and/or nonslip mats.

# IMPORTANT FOR THE FOUNDATION

Prevent rising soil moisture and condensation by means of a thick plastic sheet under the foundation. Pay attention to rainwater in the foundation design.

Place the outdoor barbecue kitchen on a paved area.

# DESCRIPTION OF SYMBOLS

Contraction of the second seco	USE WORK GLOVES DURING ASSEMBLY!
$\bigcirc$	USE A SUITABLE UNDERLAY TO PREVENT SCRATCHES!
	YOU WILL NEED A HELPER FOR THIS ASSEMBLY STEP.
	TOOLS REQUIRED FOR THIS ASSEMBLY STEP.
í	NOTE/INFORMATION
	SPIRIT LEVEL SYMBOL Align the part in question using the spirit level.




### ASSEMBLY ACCESSORIES – BBQ1102600A:

6 pcs. truss head screws M4x10 DIN 7380-1 A2 Tx 20

ACCESSORIES – BBQ2000276:

4 pcs. truss head screws M4x10 DIN 7380-1 A2 Tx 20  $\,$ 

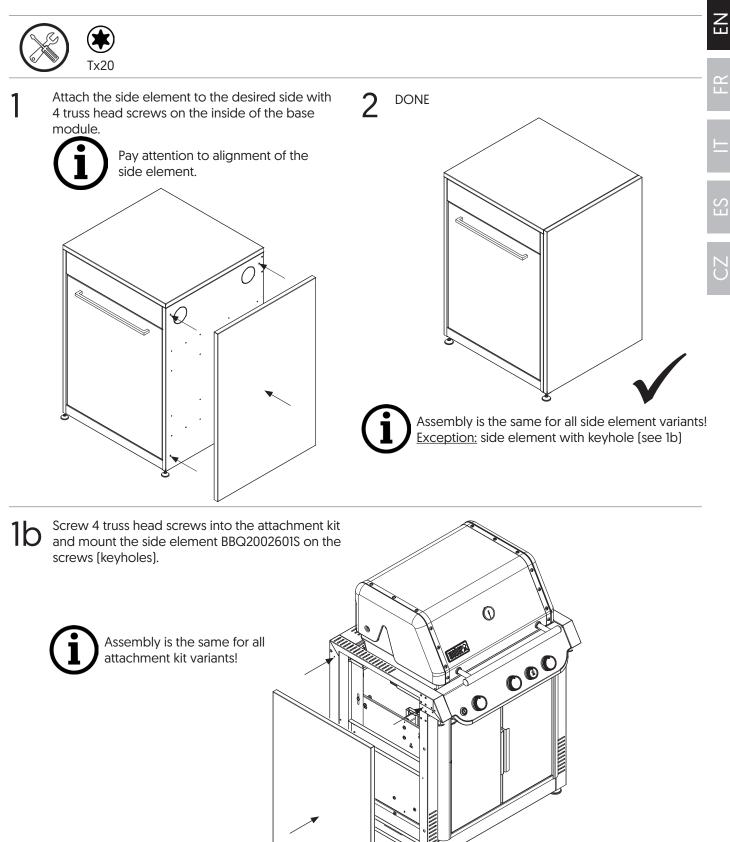

WWW.BBQ-KITCHEN.COM



BBQ KITCHEN GMBH MERKURSTRASSE 11 4614 MARCHTRENK | AUSTRIA

OFFICE@BBQ-KITCHEN.COM (+43) 7243 23 596

THE MODULAR OUTDOOR KITCHEN PERFECT FOR EVERY TERRACE. CREATED IN AUSTRIA - MADE IN GERMANY

